

HYTORC EDGE-8 TORQUE CHART

Pressure	Torque Range	Pressure
PSI	Nm	Bar
1500	1667	104
1600	1781	110
1800	2009	124
2000	2237	138
2200	2469	152
2400	2700	165
2600	2932	179
2800	3164	193
3000	3396	207
3200	3626	220
3400	3857	234
3600	4087	248
3800	4318	262
4000	4548	276
4200	4780	290
4400	5012	303
4600	5243	317
4800	5475	331
5000	5707	345
5200	5942	358
5400	6176	372
5600	6411	386
5800	6645	400
6000	6880	414
6200	7116	427
6400	7351	441
6600	7587	455
6800	7823	468
7000	8059	482
7200	8292	496
7400	8525	510
7600	8759	524
7800	8992	538
8000	9225	552
8200	9461	565
8400	9697	579
8600	9932	593
8800	10168	607
9000	10404	620
9200	10643	634
9400	10881	648
9600	11120	662
9800	11359	676
10000	11597	690



YOU MIGHT ALSO BE INTERESTED IN THESE HYTORC TORQUE WRENCHES:



AVANTI



ICE



MXT



STEALTH



VERSA



XLCT



**YOUR EXPERT PARTNER
IN BOLTING SOLUTIONS**

- ▮ Hydraulic torque wrenches
- ▮ Pneumatic torque wrenches
- ▮ Battery torque wrenches
- ▮ Electric torque wrenches
- ▮ Tensioning tools
- ▮ Hand torque tools
- ▮ Torque reaction arms and balancers
- ▮ Torque measurement and calibration instruments
- ▮ Impact sockets and accessories
- ▮ Hydraulic cylinders
- ▮ Flange tools
- ▮ Material removal tools

- ▮ Sales
- ▮ Rental
- ▮ Maintenance
- ▮ Calibrating
- ▮ Consulting
- ▮ Training

HYTORC EDGE-8

SAFETY INSTRUCTIONS

Your HYTORC torque machine is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

I Read all instructions and make sure your tool has been properly serviced and calibrated

I Consider work area environment

Make sure your work area is clean and well lit. Electrical pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks precautions should be taken.

I Avoid premature tool starting

The pump remote control is for the tool operator only.

I Stay clear during operation

In most cases, the tool will allow "hands free" operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application.

I Guard against electric shock

Ensure the pump is properly grounded and the proper voltage is being used.

I Store idle tools

When not in use, tools and accessories should be properly stored to avoid deterioration.

I Use right tool

Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.

I Proper safety attire

When handling/operating hydraulic equipment use work gloves, safety glasses, hard hats, safety shoes and other applicable clothing.

I Moving equipment

Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.

I Hoses

Make sure that the hoses are not twisted. Check the hoses regularly and replace the defective ones.

I Protective covers

The moving parts of the wrench are protected by a protective cover. Do not use a tool with no protective covers on it.

I Maintain tools with care

For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification.

I Stay alert

Watch what you are doing. Use common sense. Do not use power equipment under the influence of any mood altering substances.

I Prior to use

Ensure that all hydraulic connections are securely connected and there is no leakage. Ensure the square drive and its retainer are fully and securely engaged. Cycle tool to ensure proper function. Locate a solid, secure reaction point. Be sure the reaction arm retaining clamp is fully engaged. Be sure the hydraulic hoses are free of the reaction point. Pressurize the system momentarily; if the tool tends to "ride up" or to "creep", stop and re-adjust the reaction arm to a more solid and secure position.

I Always use quality accessories

Check sockets for size, quality and flaws - do not use if questionable. Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.

I Do not force the tool

Do not use hammer or other tools to enhance performance. If needed, use a bigger HYTORC torque wrench.

I Ask if necessary

You may always contact your official HYTORC representative, which in Finland is Haitor Oy. Always remember - safety first!